 


**Classic Monaural
& Classic Binaural**
Headset User Guide

Solving All Your Headset Needs

Congratulations on the purchase of your new **Classic Headset**. This headset will allow you hands-free, fatigue-free telephone conversation for years to come. Please read this manual carefully so that you can quickly enjoy the convenience and comfort provided by the following features.

Headband Type

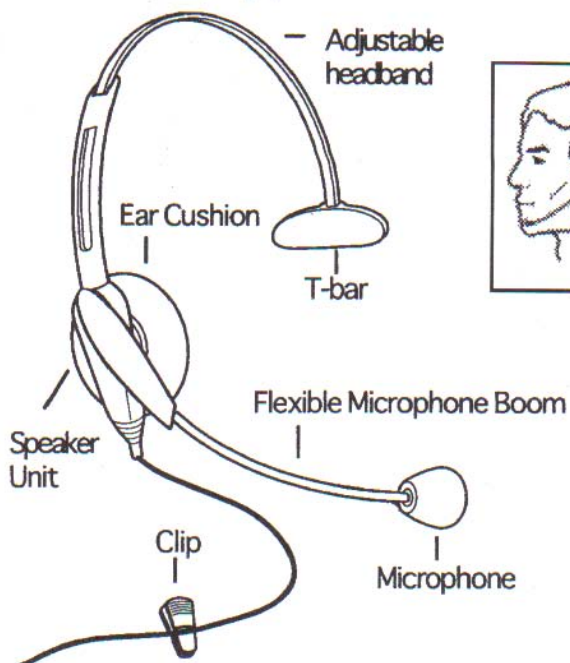


ADJUSTING THE HEADBAND

a. The Monaural style headset can be worn on either ear. To switch sides, simply slide the microphone boom downward to the other side.

b. Using both hands, flex the headband in or out until the speaker cushion rests with almost no pressure on your ear.



c. Slide the headband up or down until it rests on top of your head and the speaker cushion is centered against your ear.

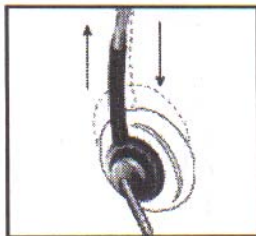

ADJUSTING THE MICROPHONE BOOM

- a.** The microphone boom is flexible. You may position the boom for maximum comfort and best transmission. The ideal placement for the microphone is usually at the corner of your mouth, not in front of it, and about an inch from your face.



- b.** Be sure that the microphone is pointed towards your mouth. You may need to rotate the microphone in order to position the front of the microphone towards your lips.
- c.** Rotate the microphone boom downward for use on either the right or left ear. (monaural headset.)

- d.** The housing of the noise canceling microphone is round in the front and flat in the back.




It is extremely important that the front of the microphone housing is pointed towards your mouth. You may recognize this by removing the foam windscreen or feeling through the foam on the microphone housing.

QUICK DISCONNECT

Your headset is equipped with a quick disconnect which allows you to place a caller on hold without removing the headset, freeing you to perform tasks away from the phone.

a. Before attempting to use your headset, be sure the two halves of the disconnect are connected.

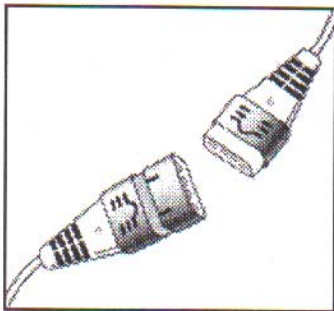


b. To put a caller on hold, grasp the quick disconnect and pull straight apart.

c. To resume your conversation, reconnect the two halves of the quick disconnect.

CLOTHING CLIP

Attach the clothing clip to your clothing at a comfortable level. To adjust the clip position, push the barrel end in and slide the cord through to provide sufficient slack so that the headset is not disturbed by head movements.

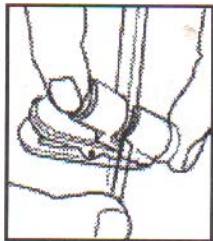

TIPS FOR CARE OF YOUR NEW HEADSET

Proper handling of your new headset will ensure many years of quality service. The following points will help achieve this.

- a.** Do not bend or twist the microphone boom within 1/2 inch of the microphone capsule.
- b.** Avoid repeated twisting of the boom.
- c.** Do not force the microphone boom arm beyond its limit.
- d.** When disconnecting the quick disconnect, do not pull apart by the wires. Grasp the two halves of the disconnect and pull apart.

WARRANTY

This product will be repaired or replaced by the manufacturer, at their option, for a period of two full years from the date of purchase, if found to be defective in any way.



*For further information on this product
please contact your local dealer or distributor*

**Thank you for Purchasing
Smith Corona's Fine Line of
Telecommunication Products**