


**Telephone Headset
Amplifier
Owner's Manual
(DA-275)**

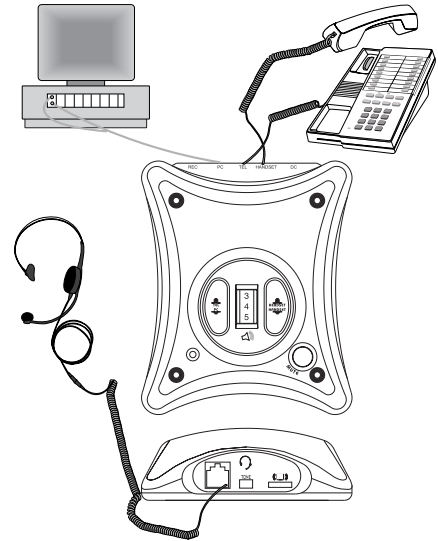

Introduction

Your new headset amplifier is a device that helps you to use your telephone, computer and external audio device through a headset. It gives you hands free, fatigue-free conversation, Internet phone call and listening music from computer soundcard or the external audio device through a headset at the same time.

Please read this manual carefully that you can quickly learn the functions provided.

1. Features & Overview

2. How to install

Stage 1. Installing batteries

Stage 2. Connecting to your telephone, headset and Computer

3. How to test before use

Stage 1. Checking for telephone use

1. Compatibility setting between telephone and amplifier
2. Adjustment of listening / transmission volume
3. Adjustment of dip switch (=Transmission level)
4. Adjustment of tone control switch

Stage 2. Checking for computer use(DA-275ONLY)




1. Stereo/Mono selection switch
2. PC listening volume controller
3. Operating for internet call

4. Operation

5. Troubleshooting

6. Warranty

1. Features & Overview

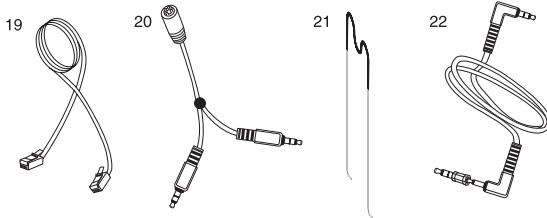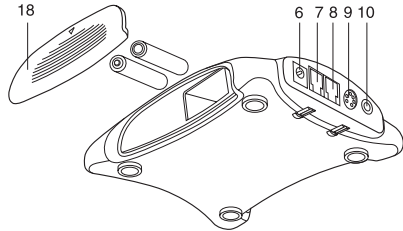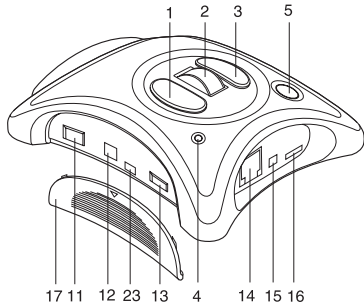

[04]

Features

1. Tel/PC button(DA-275 ONLY)
Press it for telephone, internet phone and computer(or Audio) use. Depress it for telephone use only.

2. Main Listening Volume Controller
You can increase or reduce the volume of your caller's voice and audio from PC.

3. Handset / Headset Button
Press it for handset use and depress it for headset use.

4. Battery test indicator
Press mute button, if it does not light, replace all batteries.

5. Mute Button(DA-275 ONLY) (= Battery test)
Press the button to cut off the microphone temporarily. Just depress the button to resume communication with your caller. If the battery test indicator does not light by pressing mute button, replace all the batteries. (Operational battery life : not less than 2,000 hours)

6. External power supply jack
()
You can use AC power adapter (3V DC) instead of battery.

7. Handset Jack (HANDSET)
Connect your handset to this jack.

8. Telephone jack (TEL)
Connect a telephone curly cord supplied between the handset jack of your telephone and amplifier.

9. External computer or Audio device jack (PC)(DA-275 ONLY)
Connect a computer cord supplied between computer or audio and amplifier.

10. Stereo Jack for Recorder
The Stereo plug of recorder can be connected (Option).

11. Telephone Compatibility Switch
Compatibility setting between telephone and amplifier.

[05]

12. Dip switch

For transmission level and dynamic microphone.

13. Transmission volume controller

Set the volume controller by sliding the knob when it becomes optimal sound for your caller.

14. Headset Jack

Connect your headset to this jack.

15. Tone Control Switch(DA-275 ONLY)

Set the tone control switch to be bass or treble sound.

16. PC listening volume controller(DA-275 ONLY)

Adjust PC listening volume only when it's low or loud.

17. Security cover

18. Battery cover

19. Telephone curly cord

Connect this cord between telephone and amplifier.

20. Computer cord(DA-275 ONLY)

Connect this cord between computer(or audio device) and telephone jack of amplifier.

21. Headset Hanger

22. Attenuated cord(Option)

Connect the attenuated cord between stereo jack for recorder and recorder's for call recording.

23. Stereo/Mono Selection Switch(DA-275 ONLY)

Select the knob as per mono or stereo you are going to use.



2. How to install

Stage 1. Installing Batteries

We recommend two "AA" alkaline batteries (Not included) for installation. Operational battery life are about 2,000 hours.


- Remove the battery cover on the side of amplifier.
- Install two "AA" alkaline batteries and replace the battery cover
- Press the Mute button to confirm if the batteries are well fitted or not.

* Note : Alternatively, if you want to use AC power supply (Not included), you can connect AC adapter (3V DC OUT) to external power supply jack. (Feature no.6).

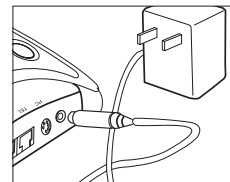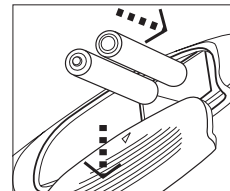


Stage 2. Connecting to your telephone, headset and computer


1. Unplug your telephone's handset cord from the telephone base and plug it into the handset jack of amplifier (Feature no. 7)

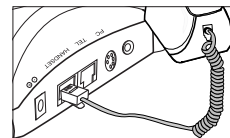

2. Connect a telephone curly cord (Feature no.19) between the handset jack of your telephone and Telephone jack of amplifier (Feature no.8)

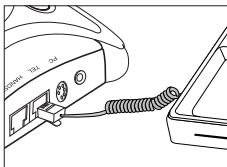


3. Plug one complete headset to the headset jack of amplifier (Feature no.14) located on the front side of the cabinet

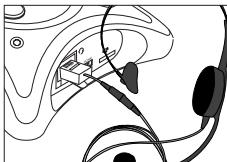


Notes : When you use a monaural headset, slide the knob to the right (M)(Feature no.23) And when you use a stereo headset supplied by us slide to the left (S),(DA-275 ONLY)

4. Connect a computer cord supplied (Feature no. 20) between the PC jack of amplifier (Feature no. 9) and two jacks of Computer base or other audio device.(DA-275 ONLY)

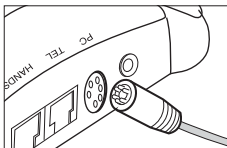

Notes : It's an advanced function for internet call, listening music from computer or external audio device.

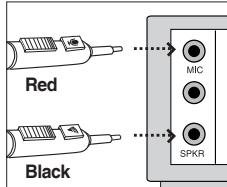

3. HOW TO TEST BEFORE USE


Stage 1. Checking for telephone use

Wearing the headset, Lift the handset from its cradle, position it off-hook and listen.




1.Compatibility setting between telephone and amplifier

If you can't hear dial tone at factory setting, adjust the compatibility switch between telephone and amplifier as follows

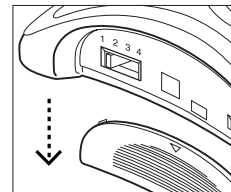


- 1) Remove the Security cover which is located on the side of amplifier.

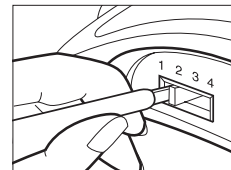

- 2) Slide the compatibility switch by clicks until you can hear a clear dial tone.


- 3) If amplifier does not work with the above compatibility, Your headset may be a dynamic microphone. Place Dip switch No. 2 to "OFF" and adjust compatibility switch again until you hear a dialtone as the same manner.

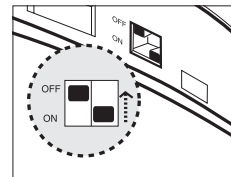


2. Adjustment of listening / Transmission volume

Firstly, place the digit no.5 of listening volume controller to the center and set the white marking part of microphone volume controller to the center.


After the above setting, if the unit is not working properly, use the following adjustments for the best set-up.

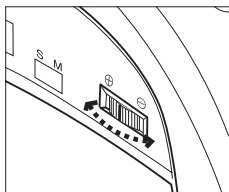

- 1) If there is beep sound, slide the Transmission volume controller to the right side(-) for low volume. And if Listening / Transmission is low, slide Transmission volume controller to the left(+) and increase Listening volume controller at the same time until they are increased for proper level for your caller.

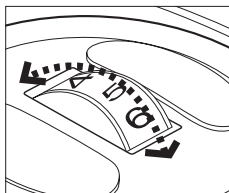

- 2) If there is humming tone, adjust both Listening and Transmission volume controller to the low volume side at the same time.

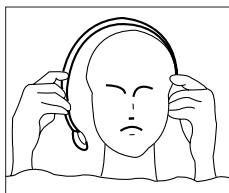


- 3) If there is high pitched feedback when the volume is set to normal usage levels, adjust the distance of headset boom between the microphone head cap and your mouth. The proper distance is one inch apart from your mouth.

3. Adjustment of dip switch (= Transmission level)

If the transmission volume is too big or too low even though you did all the above settings, it may be bad telephone line condition or low output of telephone transmission level.


If the TX volume is too big, place switch no.1 to "OFF" (factory set-up) to decrease it.

If the TX volume is too low, please switch no.1 to "ON" to increase it.

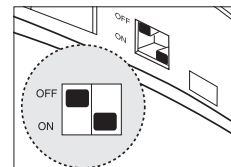

4. Adjustment of tone control switch for all day long users with telephone.

If you want to hear bass sound for comfort, fix the control switch to the right. If treble sound for clarity, fix it to the left.

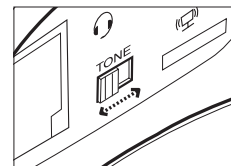

Stage 2. Checking for Computer use




1. Stereo / Mono selection switch (DA-275 ONLY)

- 1) When you use a monaural headset, slide the knob to the right (M) (Factory setting)

* Notes; you can hear very low sound if it's positioned to the left(S) by using monaural headset.

- 2) In a stereo headset supplied by us, slide the knob to the left(S) to enjoy stereo sound

* Notes ; If it's positioned to the right (M) by using our stereo headset or if it's not our supplied headset, it cannot be properly worked. At once, **you should use our specified stereo headset to hear stereo sound.**

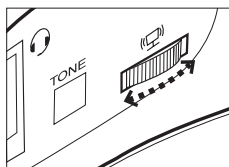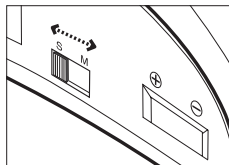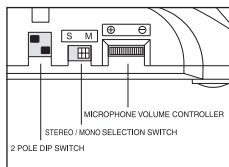

2. PC listening volume controller (DA-275 ONLY)

- 1) Adjust listening volume of music, internet phone from computer or other audio device by sliding.

- 2) With the above adjustment if the volume is still too low or high, adjust the volume of soundcard in computer.

3. Operation



- 1) **To make an Internet phone call, a telephone call, listen music from computer and other audio device at the same time.(DA-275 ONLY)**

Press TEL/PC button for internet phone call, telephone call, and computer music (or audio).

Adjust PC listening volume controller for optimal sound and dial after tone. You may need to adjust your soundcard volume in Computer for optimal performance.


In this case, the music does not transmit to the caller.

* Notes: In depressing Tel/PC button, it can work only for telephone use.

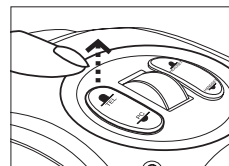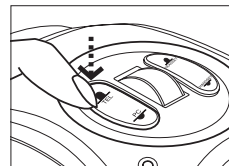


2) To record a call

Connect an Attenuated Cord (Feature No.22) optionally supplied between Stereo jack for recorder and your computer or exterior recorder. Operated recording function of the computer or exterior recorder. You may need this record for your job references or to report the record to the other party or your boss.

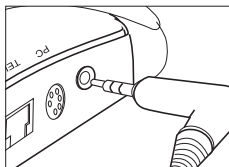

3) Mute

If you press Mute button during telephone call, the music from computer or audio device is transmitted to the other party while the microphone is cut off.

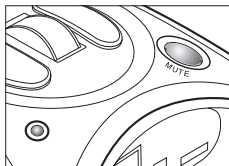

4. Operation

Receiving by headset : Depress the headset/handset button(feature no.3), wear the headset. Lift the handset from its cradle and place it "off hook" when the telephone rings. You can answer the telephone by headset.

Making a call by headset : Depress the headset /handset button (feature no.3), wear the headset.

Lift the handset from its cradle and place it "off hook" and dial after listening tone signal. To terminate a call, hang up the telephone handset.

Handset use : Press the headset /handset button (feature no.3), lift the handset, dial after listening dial tone.

* Off hook lever use(option) : "Off-hook Lever" eliminates the need for you to lift the handset, just pull the lever when the telephone rings, you can talk with the caller without completely removing the handset from its cradle.

Remarks : if your telephone has a program for "headset" use or a switch that can be used by headset, you won't need to lift the handset every receiving or call. Just press a button for making or receiving a call. The telephone that has the headset-use button will vary from one telephone to another, but most often it is the "line button".

Check your telephone's manual for details. Most of key phone systems have this program.

5. TROUBLESHOOTING

The following information covers common problems and suggests solutions.

If the amplifier and headset are not operating properly, follow the suggestions in this section

CALLERS CAN'T HEAR ME AND I CAN'T HEAR MY CALLERS

1. Check the installation. Check all cords are properly connected.
2. Check the Handset / Headset button. Push the button down for handset use, and push-up for headset operation.

CALLER'S VOICE IS LOW OR DISTORTED.

1. Adjust the Listening Volume Controller on the amplifier.(feature no.2)
2. If there is a dip switch on the side of your amplifier, set to the correct position as per the instruction manual.(feature no.12)
3. Replace your batteries. For best results, use Duracell alkaline batteries.

CALLERS CAN'T HEAR ME, BUT I CAN HEAR THEM.

1. Be sure the microphone is properly positioned, about one inch from the corner of your mouth.
2. Adjust the Transmission volume controller (Feature no.13)

THE PEOPLE I'M TALKING TO SAY I SOUND UNCLEAR OR TOO FAR AWAY.

Adjust the position of your microphone.

The best place for the microphone is not directly in front of your mouth, but near the corner of it, similar to the way you position the telephone handset. In this position, you can pick up the sound waves from your speech, but not the air moving from your mouth and nose.

MY VOICE ECHOES OR I SOUND LIKE I'M IN A TUNNEL

Slide the Transmission volume Controller to the left side for a lower volume.

WARRANTY

We will repair or replace, at our opinion, this product if found defective due to materials or workmanship within the warranty period beginning from the original date of purchase. This product is warranted by authorized representative for the period specified.

The original dated purchase receipt must be presented to the authorized service center when service is rendered.

On all carry-in models, transportation to and from the service station is the responsibility of the purchaser.

This warranty does not cover damages due to accident, fire, flood, earthquake and/or other acts of God; misuse, incorrect line voltage, improper installation, improper or unauthorized repairs, commercial use or damages occurred in shipping.

Exterior and interior finish, lamps, glass, plastics parts and temperature probes are not covered under this warranty.

Customer adjustment according to the owner's manual are not covered under this warranty.

This warranty is automatically void if the serial number is missing or altered.

WARRANTY CARD

Mr./Mrs./Miss/Co.

Telephone No.

Address

Model No.

Brand

Serial No.

Invoice No.

Dealer

Date of Purchase

Note : THIS WARRANTY CARD WILL BE VOID IF IT IS NOT MAILED BACK TO OUR COMPANY WITHIN 10 DAYS FROM DATE OF PURCHASE, WARRANTY CONDITIONS (PLEASE SEE OVERLEAF)